



HYBRIDair

Wheel well clearance check

If you are unsure about clearance of the CoiloverLifts to your wheels or body, here is a simple illustration to help you.

When measuring the height clearance of the CoiloverLifts, you will want to measure downwards from the bottom of the strut bearing. When air is added to the system and the bag assembly extends, there is no change to measurement **(A)**. All extension adds distance between the top of the spring and the strut bearing.

When measuring bag clearance to body, ensure there is enough room at full lock in both directions. When air is added to the system, the bag does NOT expand in diameter.